


Assembly manual – SQS Shift Cut Box - SCB

+pole from ignition
output to ignition coil
body (-pole battery)
1st cabel from SQS switch (not matter which)
1st cabel from SQS switch

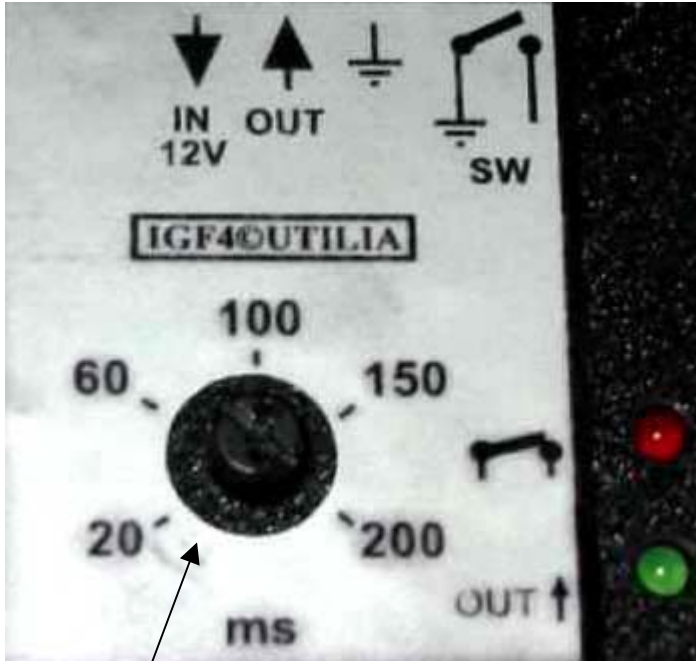

Set time of required sparking interruption by turning button range: 0,02-0,2 sec

RED lights when SQS switch is ON – by every shifting – lenght depends on speed of shift move

GREEN lights when SCB is under supply (ignition ON), stops light for time when is disconnected ignition spark – time which you set